

NetFlow Navigation

This chapter explains what is where in NetVizura NetFlow Analyzer module.

To access NetFlow Analyzer module, click NetFlow on the Module Menu in the Top navigation bar.

When NetFlow module is selected the Flow main screen will show, as shown on the picture below. Note that data displayed will be according to Time Window value: if Time Window is set to Last Day, charts and tables will show netflow traffic that occurred in the last 24h.


On this page:

- [NetFlow Analyzer User Interface](#)
- [Navigating TopN](#)
- [Navigating Raw Data](#)

NetFlow Analyzer User Interface

First let us define main parts of the NetFlow Analyzer user interface:

1. **Mode Panel** – choose between the TopN and Raw Data mode
! Only users with NetFlow write module permission can see Raw Data mode
2. **Menu Panel** – shows options available in the selected mode
3. **Tab Panel** - shows additional options depending on selected mode and menu option (and selected node)
4. **Main Panel** – shows network traffic charts and tables for the set Time Window

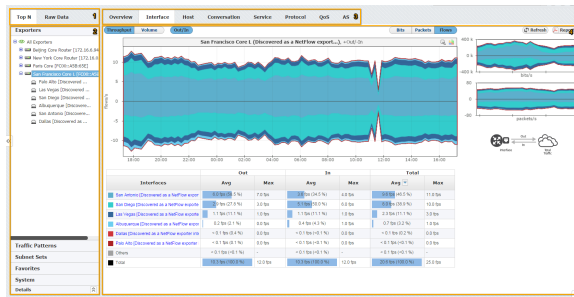

To make navigation easier for you, several indicators (blue or white highlights) show where you are and what you are doing – which mode, option, graph, etc. you are currently using or setting. On the figure above you can see that the selected Mode is TopN, selected Menu option is Exporter (San Francisco is the active node), and that selected Tab options is Interface - this results in Main Panel showing the TopN interfaces for exporter San Francisco.

Navigating TopN

To access TopN choose TopN in the Menu mode.

Main parts of the NetFlow TopN interface are:

1. Time Window - sets the time window for TopN traffic
2. Menu Panel shows:
 - a. Exporters and Interfaces Node tree
 - b. Traffic Patterns and subnets Node tree
 - c. Traffic Patterns and Subnet Sets Node tree
 - d. Favorite nodes
 - e. System traffic types
 - f. Details for selected node in the Node Tree.
3. Selected node - active node for which the traffic is displayed in the Main Panel
4. Traffic distribution (Tab Panel) – traffic distribution by subnets (Traffic Pattern view only), interfaces (Exporter view only), hosts, conversations, services, protocols, QoS and AS
5. Chart and table (Main Panel) – traffic values for the selected node by selected distribution during time set in Time Window
6. Side Panel – two small charts showing (bits, packets or flow traffic), PDF reports and refresh options

